INSTALLATION OF ACCESS PANELS

Footend Sliding Access Panels

Panels of tables with Serial Numbers below H00852, have galvanized panel. New models do not have this panel.

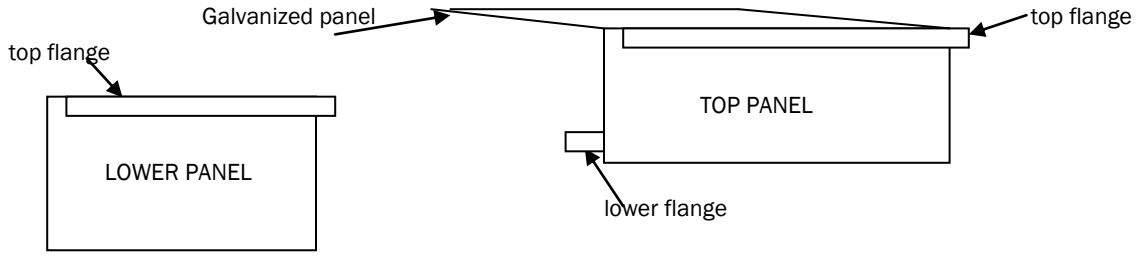

Removing Panels:

1. Place table in full UP position
2. Unplug table
3. Slide both panels up and out of tracks
4. Note the track designation for the top panel as well as the lower panel for easier reinstallation

Installing Panels:

1. Place table in full UP position
2. Remove foot end drawer
3. Insert lower panel all the way into the track with ¼" flange positioned outward, towards installer
4. Insert top panel so the ¾" top flange is resting on the two bolts on moveable table section. On tables with serial numbers below H00852, make sure all hoses and electrical wires are clear of the galvanized panel, that is bolted to the top access panel.
5. With one hand, reach through the foot end drawer opening and hold the top panel.
6. Lift lower panel with your other hand until top flange of lower panel overlaps with lower flange of the top panel. Raise connected units slightly and carefully lower unit into tracks.
7. Make sure flange of top panel is securely resting on two bolts on moveable table section.
8. Lower table to full down position and confirm top flange of top panel is resting on squaring panel.

Headend Channels, Squaring Panel and Sliding Access Panel

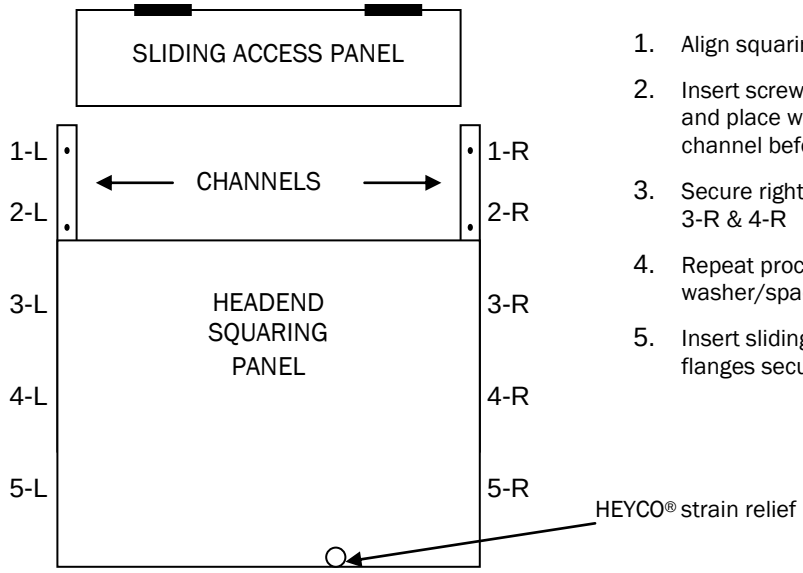

1. Align squaring panel and insert screws 5-L & 5-R
2. Insert screws 1-R and 2-R into the right channel and place washer/spacers on back side of channel before fastening to table base.
3. Secure right side of squaring panel with screws 3-R & 4-R
4. Repeat process on the left side making sure washer/spacers have been properly installed.
5. Insert sliding access panel making sure top flanges securely rest on internal posts.